

LELO

SILA™ Cruise
Sonic Clitoral Massager



USER MANUAL

Blessed be the orgasms.

May the Ethereal Sonic Touch
open the ways to reach climax.

Use it wisely, often and with care.

 
Congratulations on acquiring SILA™ Cruise. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

GETTING STARTED

- Before first use, charge your SILA™ Cruise for 2 hours.
- Make sure SILA™ Cruise is unlocked by pressing and holding the + and – buttons simultaneously for 3 seconds until the light turns on.
- Apply LELO Personal Moisturizer on the product and your body for enhanced pleasure.
- Press + button to turn on; press again to increase vibration strength.
- Press (j) button to switch between the 8 vibration patterns.
- Press – button to reduce vibration strength.
- Press and hold (j) button to turn off.

GETTING TO KNOW YOUR SILA™ Cruise

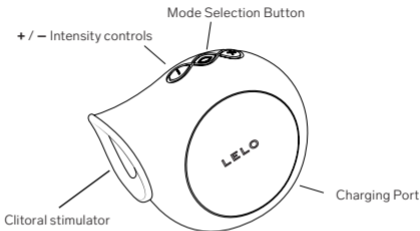


CRUISE CONTROL (For SILA Cruise only)

Cruise Control is a fully automatic function, not a setting that requires you to turn it on or off. Cruise Control is designed to detect any slowing motion of the motor and can boost the motor up again via PWM (Pulse Wave Modulation). In doing so, Cruise Control ensures that you enjoy consistent power and intensity, even while SILA is pressed firmly against your body


Cruise Control™
TECHNOLOGY

USING SILA™ Cruise

 - How to hold

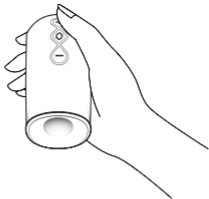

- Where to place on the body

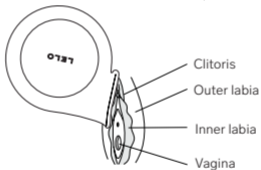


Tip: for the most pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to SILA™ Cruise before and during use.



CHARGING YOUR SILA™ Cruise

- Insert the DC plug into the DC port at the base of your SILA™ Cruise.
- Insert the mains plug into a USB Port. The LED on the interface of your SILA™ Cruise will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow
- When the battery is running low, the LED on your SILA™ Cruise will emit a blinking white light.

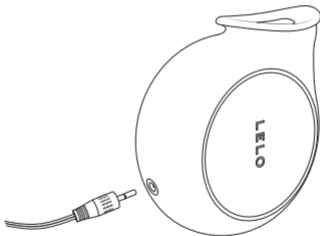

Only use original chargers provided by LELO with your SILA™ Cruise.

CLEANING, STORAGE, AND SAFETY

Using SILA™ Cruise with hand creams or silicone-based lubricants may make the silicone permanently tacky.

SILA™ Cruise is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your SILA™ Cruise thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your SILA™ Cruise in direct sunlight and NEVER expose it to extreme heat. Store your SILA™ Cruise in a dust-free place and keep it away from products of other materials.

IMPORTANT: This appliance can be used by people aged 18 years and over and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Minors shall not play with the appliance. Minors shall not clean and use the appliance unsupervised.

The appliances must only be supplied at SELV.

TROUBLESHOOTING

The LED on your SILA™ Cruise does not pulse when the charger is connected?

- Battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your SILA™ Cruise does not activate when the center button is pressed?

- The battery is empty. Recharge your SILA™ Cruise.
- The interface of your SILA™ Cruise is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your SILA™ Cruise or if you have any questions regarding the operation, please contact: **customer care@lelo.com**

SPECIFICATIONS

MATERIALS	Body-safe Silicone, ABS
BODY COLORS	Pink, Lilac, Aqua
INTERFACE	3-button
SWITCH OFF	Automatic
FREQUENCY	60Hz
BATTERY	Li-Ion 520mAh 3.7V
CHARGE TIME	2 h at 5.0V 500mA
USER TIME	Up to 2 hours
STANDBY TIME	Up to 90 days
SIZE	80 x 75 x 35mm / 31.5 x 25.5 x 13.8In
WEIGHT (ONLY PRODUCT)	105g / 0.23lb

REGISTER WARRANTY

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at LELO.COM then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collectionpoint for recycling of electrical and electronic equipment.



Disclaimer: Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Model may be changed for improvements without notice.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

© 2020 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED FOR LELO IN CHINA

WEBSITE: WWW.LELO.COM

SUPPORT: CUSTOMERCARE@LELO.COM

www.lelo.com